



Water level adjustment instructions: to lower level settings, rotate set screw counter-clockwise; to raise level settings, rotate set screw clockwise. PLC inputs X5 and X6 will illuminate when water level is attained. X7 will illuminate when water level drains below a safe level for extraction step. Machine will not extract unless X7 is illuminated.